










1107 S Flower St Burbank, CA 91502 (818) 563-3322

Set Up instructions | 10 ft Vertical Curve TensionLite

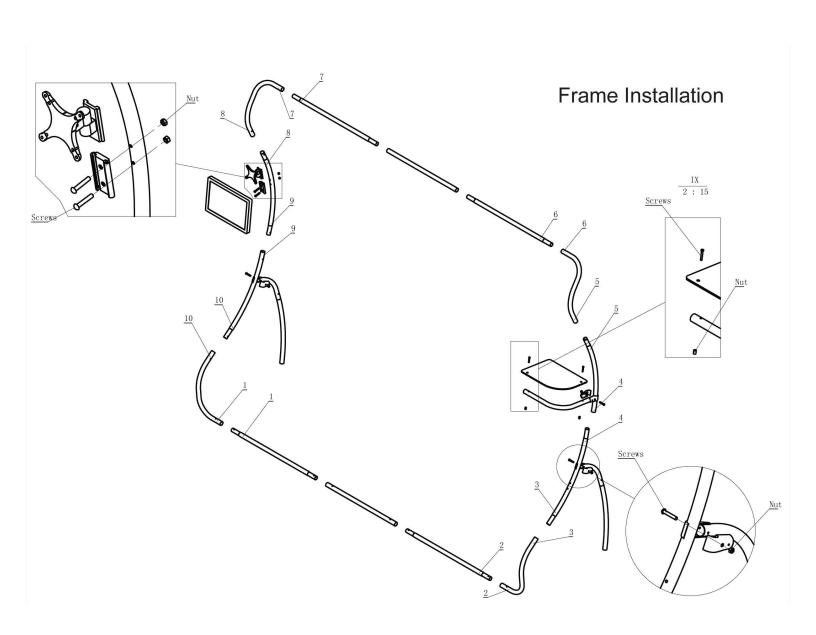












1107 S Flower St Burbank, CA 91502 (818) 563-3322

Set Up instructions | 10 ft Vertical Curve TensionLite



STEP 1:

Connect all the pipes together \ according to the sticker number on each pipe. Make sure it is the same sticker number before you join the pipes. (Do not attach the legs yet).

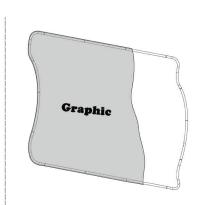


STEP 2:

Put the graphic on the frame just like you put a pillowcase on a pillow Zip up the graphic holding together the zipper sides.



STEP 3:

Install the legs.

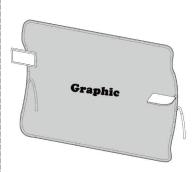

STEP 4:

Attach the monitor mounts, shelf and lights. (note: over-tightening the lights may result in damage to the graphic print)