











1107 S Flower St Burbank, CA 91502 (818) 563-3322

## Set Up instructions | 20 ft Concave TensionLite

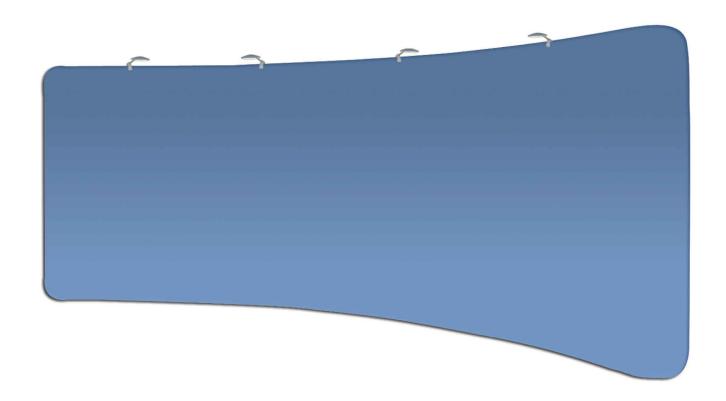

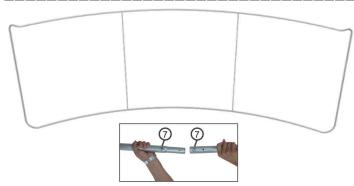

Connect all the pipes together according to the sticker number on each pipe. Make sure it is the same sticker number before you join the pipes.

For example:  $\bigcirc$  on the Corner sections(C) meet the  $\bigcirc$  on the Curved Pipes(B).

## STEP 2:



Put the graphic on the frame, just like you put a pillowcase on a pillow.



Hold the zipper close together before zipping up.





Hand-tighten the LED light (E) on the top of the frame and connect the power cord.

**Please Note:** Over-tightening the lights may result in damage to the print.