




**IMAGE**  
design & communications  
BUILDING RELATIONSHIPS  
THROUGH DESIGN



**BANNER  
STANDS**  
OnTheNet  
.com


1107 S Flower St  
Burbank, CA 91502  
(818) 563-3322

## Set Up instructions | 8 ft Concave TensionLite

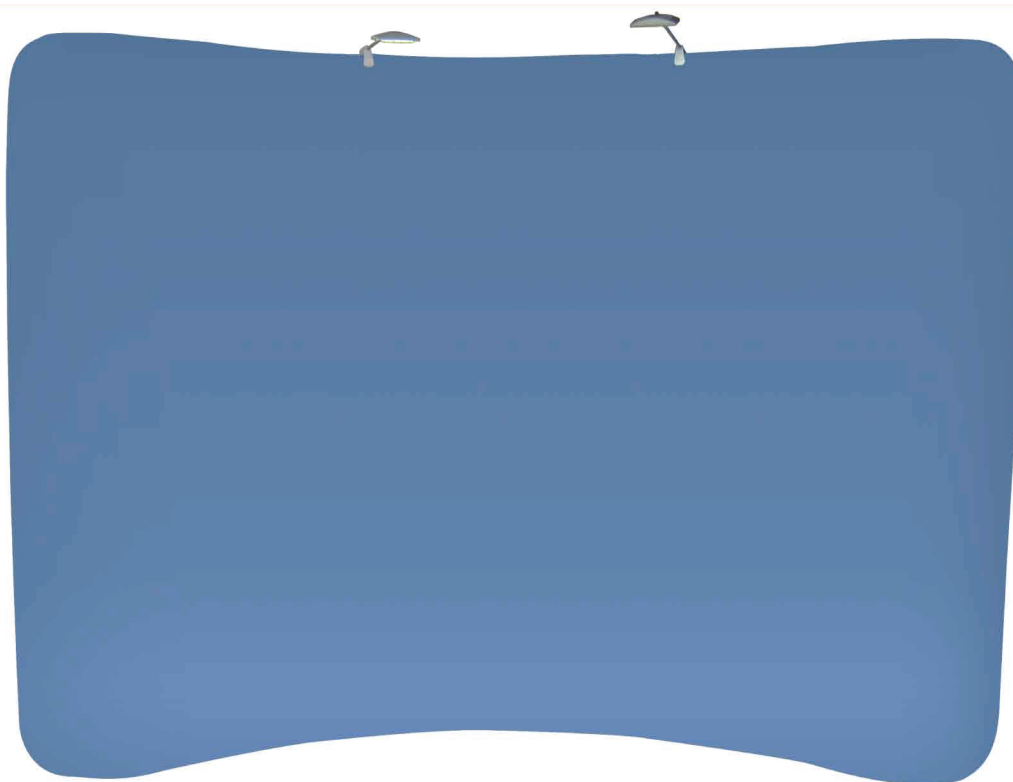

## Set Up instructions | 8 ft Concave TensionLite


### STEP 1:

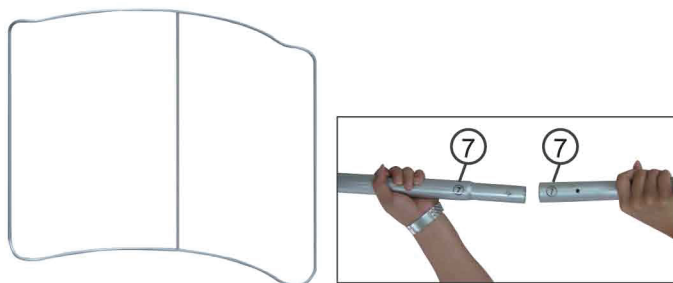

Connect all the pipes together according to the sticker number on each pipe. Make sure it is the same sticker number before you join the pipes.

For example: ⑦ on the Corner sections(C) meet the ⑦ on the Curved Pipes(B).

### STEP 2:

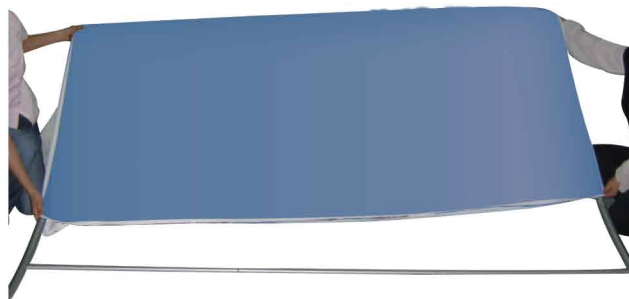

Put the graphic on the frame, just like you put a pillowcase on a pillow.

### STEP 3:



Hold the zipper close together before zipping up.

### STEP 4:



Hand-tighten the LED light (E) on the top of the frame and connect the power cord.

**Please Note:**

Over-tightening the lights may result in damage to the print.