




IMAGE
design & communications
BUILDING RELATIONSHIPS
THROUGH DESIGN



**BANNER
STANDS**
OnTheNet
.com


1107 S Flower St
Burbank, CA 91502
(818) 563-3322

Set Up instructions | 10 ft Concave TensionLite

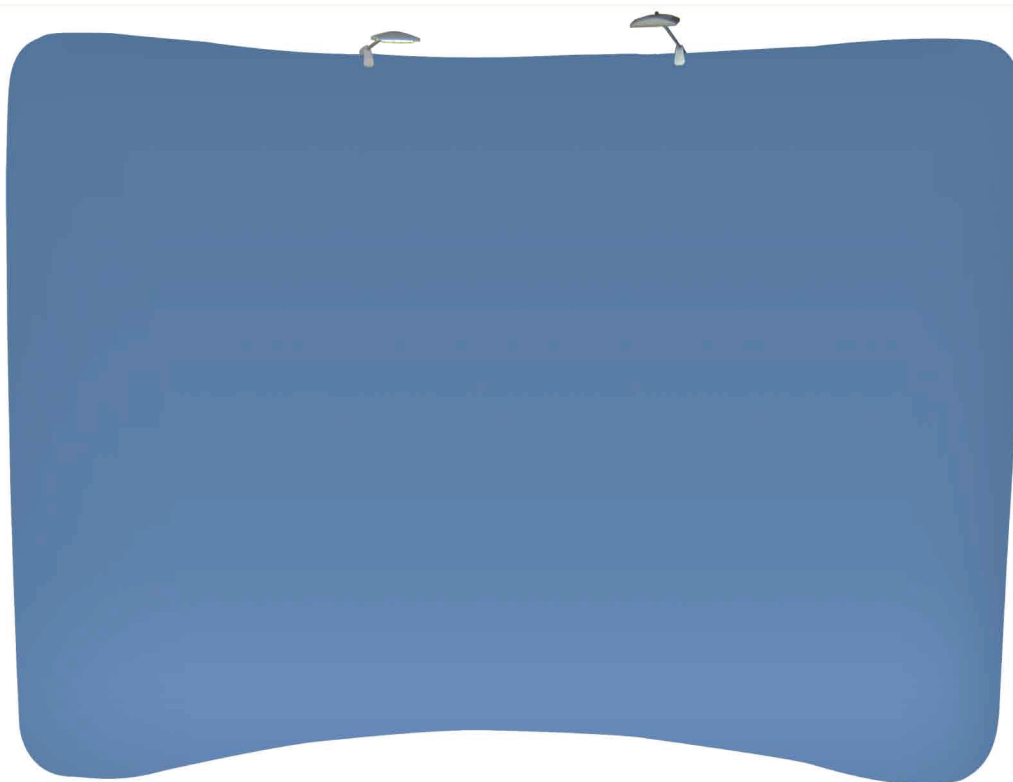

Set Up instructions | 10 ft Concave TensionLite


STEP 1:

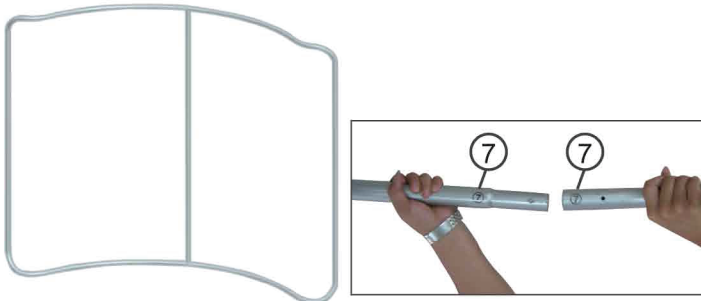

Connect all the pipes together according to the sticker number on each pipe. Make sure it is the same sticker number before you join the pipes.

For example: ⑦ on the Corner sections(C) meet the ⑦ on the Curved Pipes(B).

STEP 2:

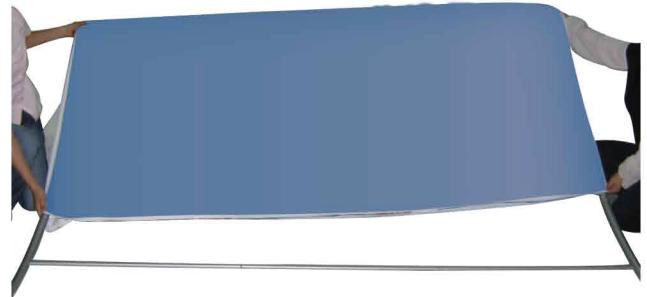

Put the graphic on the frame, just like you put a pillowcase on a pillow.

STEP 3:



Hold the zipper close together before zipping up.

STEP 4:



Hand-tighten the LED light (E) on the top of the frame and connect the power cord.

Please Note:

Over-tightening the lights may result in damage to the print.